

## ■ Willcom Co.,LTD 車載用DC充電器シリーズ ■

- ★該当品番：MB-83 / MB-69 / MB-95 / MB-98 / MB-99CB …… MicroUSB外部接続端子
  - ★該当品番：MB-83 / MB-69 / MB-95 / MB-98 / MB-99CB /  
MB-100/MB-101/MB-102/MB-103/MB-104 …… MicroUSB端子
  - ★該当品番：MB-89 / MB-87 / MB-68 / MB-96 …… Dock端子
  - ★該当品番：MB-31 / MB-33 / MB-78 …… Foma/SoftBank
  - ★該当品番：MB-30 / MB-32 / MB-77 …… au
  - ★該当品番：M85 / MB-86 / MB-88 / MB-53 / MB-97 / MB-34 …… マルチ(複数機種)端子
- ※ マルチ(複数機種)端子は各携帯ごとの適合を確認下さい。  
 ※一部のスマートフォンや携帯電話は、防水機能などにより、コネクタが奥までささらない場合がございますので、ご注意ください。

注:ADC-03トラベルチャージャーⅢ非適合機種(内蔵リチウム電池ご使用時)

### docomo Foma

SAMSUNG

SC-06D

### スマートフォン用

※MicroUSB端子

※該当品番：MB-83 / MB-69 / MB-95 / MB-98 / MB-99CB  
MB-100/MB-101/MB-102/MB-103/MB-104

※1 「USB Type-C」コネクタ対応機種のため、「microUSB変換アダプタ B to C 01」等の  
変換ケーブルを使用した場合は対応しております。

### docomo

TOSHIBA

T-02D / T-01C / T-01B / T-01A

### SonyEricsson

SO-04E / SO-02E / SO-04D / SO-05D / SO-03D / SO-02D / SO-01D / SO-03C  
SO-01C / SO-02C / SO-01B

### SONY

SO-02K ※1 / SO-01K ※1 / SO-04J ※1 / SO-03J ※1 / SO-02J ※1 / SO-01J ※1 / SO-04H / SO-03H  
SO-02H / SO-01H / SO-04G / SO-03G / SO-02G / SO-01G / SO-04F / SO-03F / SO-02F / SO-01F / SO-01E

### SHARP

SH-01K ※1 / SH-03J ※1 / SH-02J / SH-04H / SH-02H / SH-01H / SH-04G / SH-03G / SH-02G / SH-01G  
SH-05F / SH-04F / SH-03F / SH-02F / SH-01F / SH-07E / SH-06E / SH-05E / SH-04E / SH-02E / SH-01E  
SH-10D / SH-09D / SH-07D / SH-06D / SH-02D / SH-01D / SH-12C

### SAMSUNG

SC-01K ※1 / SC-04J / SC-03J ※1 / SC-02J ※1 / SC-02H / SC-01H / SC-04G / SC-05G / SC-01G / SC-02G  
SC-04F / SC-02F / SC-01F / SC-04E / SC-03E / SC-02E / SC-06D / SC-05D / SC-04D / SC-03D / SC-02C  
SC-02B / SC-01B

### Research In Motion

BlackBerry 9900 / BlackBerryBold 9780  
BlackBerry Curve 9300 / BlackBerryBold9700

### LG

L-01J ※1 / Nexus 5X ※1 / L-01F / L-05E / L-04E / L-02E / L-01E / L-06D / L-05D / L-02D / L-01D / L-03C  
L-04C / L-07C

**NEC**

N-06E/N-05E/N-04E/N-03E/N-02E(ONE PIECEモデルも含む)/N-07D  
N-05D/N-04D/N-01D

**Panasonic**

P-03E/P-02E/P-07D/P-06D/P-04D/P-05D/P-02D/P-01D/P-07C

**FUJITSU**

F-01K ※1/F-05J/F-04J/F-01J/F-03H/F-02H/F-01H/F-04G/F-02G/F-06F/F-05F/F-04F/F-03F  
F-01F/F-09E/F-08E/F-07E/F-06E/F-02E/F-12C/F-03E/F-04E/F-11D/F-12D/F-10D/F-09D  
F-08D/F-07D/F-05D/F-03D

**HUAWEI**

HW-03E/HW-01E

**Disney Mobile On Docomo**

DM-01J/DM-02H/DM-01H/DM-01G

**ZTE**

MO-01K/MO-01J

*au*

**TOSHIBA**

IS11T/IS12T/IS04/IS02

**SHARP**

SHV41 ※1/SHV40 ※1/SHV39 ※1/SHV38/SHV37/SHV36/SHV35/SHV34/SHV33/SHV32/SHV31  
SHL25/SHT22/SHL24/SHL23/SHL22/SHL21/IS17SH/IS15SH/ISW16SH/C01/IS14SH/IS13SH  
IS12SH/A01/IS11SH/IS05/IS03/IS01

**PANTECH**

PTL21/IS11PT/IS06

**HTC**

HTV33 ※1/HTV32 ※1/HTV31/HTL23/HTL22/HTL21/A02/ISW13HT/ISW12HT/ISW11HT

**SonyEricsson**

IS12S/IS11S

**SONY**

SOV36 ※1/SOV35 ※1/SOV34 ※1/SOV33/SOV32/SOV31/SOL26/SOL25/SOL24/SOL23/SOL22  
SOL21

**CASIO**

CAL21/IS11CA

**MOTOROLA**

IS12M/ISW11M

**KYOCERA**

KYV42/KYV41 ※1/KYV40/KYV39/V03(KYV38)/KYV37/KYV36/G02(KYV35)/V02(KYV34)/A03/KYV32  
KYL23/V01(KYV31)/G01(KYY24)/L03(KYY23)/L02(KYY22)/KYL22/L01(KYY21)/KYL21/KYY04/ISW11K

**FUJITSU**

FJL22/FJL21/ISW13F/IS12F/ISW11F

**NEC**

IS11N

**LG**

LGV35 ※1/LGV34 ※1/LGV33/LGV32/LGV31/LGL24/LGL23/LGL22/LGL21/IS11LG

**SAMSUNG**

SCV37 ※1/SCV36 ※1/SCV35 ※1/SCV33/SCV32/SCV31/SCT21/SCL24/SCL23/SCL22/SCL21  
ISW11SC

**FirefoxOS(LG)**

LGL25

**SoftBank****TOSHIBA**

X02T

**SHARP**

701SH ※1/606SH/605SH ※1/603SH/509SH/506SH/503SH/502SH/403SH/404SH/402SH/401SH  
305SH/304SH/303SH/302SH/206SH/205SH/204SH/203SH/200SH/107SH/102SH II /106SH/104SH  
103SH/102SH/101SH/009SH/005SH/006SH/007SHJ/007SH/003SH

**SONY**

701SO ※1/602SO ※1/601SO ※1/502SO/501SO/402SO/401SO

**SAMSUNG**

404SC/X01SC/830SC

**HTC**

601HT ※1/001HT/X06HT・X06HT II

**ZTE**

602ZT/402ZT/009Z/003Z/008Z

**Panasonic**

102P/101P

**NEC**

101N

**KYOCERA**

602KC/503KC/404KC/202K/201K/101K

**HUAWEI**

201HW/007HW

**DELL**

101DL

**FUJITSU**

301F/202F/201F/101F

**MOTOROLA**

201M

**Disney Mobile On SoftBank**

DM016SH/DM015K/DM014SH/DM009SH/DM010SH/DM011SH/DM012SH/DM013SH

**E-MOBILE****HTC**

S31HT

**HUAWEI**

GL07S / GS03 / GS02 / S31HW / S42HW

**SonyEricsson**

S51SE

**DELL**

GS01

**FUJITSU**

EM01F

**WILLCOM****KYOCERA**

WX10K / WX06K / WX04K

**SHARP**

WX05SH / WX04SH

**HUAWEI**

201HW

**Y!mobile****HUAWEI**

608HW / 503HW / 302HW

**KYOCERA**

S2 / 503KC / 404KC / 302KC

**MOTOROLA**

Nexus6

**LG**

402LG

**SHARP**

X1 ※1 / S1 / 507SH

**HTC**

X2 ※1

**その他****LG**

NEXUS5

**HUAWEI**

Nexus 6P ※1

**従来型携帯電話 (microUSB端子)**

※MicroUSB端子

※該当品番 : MB-83 / MB-69 / MB-95 / MB-98 / MB-99CB  
MB-100 / MB-101 / MB-102 / MB-103 / MB-104**docomo****FUJITSU**

F-02J / F-05G

**SHARP**

SH-01J / SH-06G

**Panasonic**

P-01J

**au****KYOCERA**

KYF37/KYF36/KYF35/KYF34/KYF33/KYF32/KYF31/KYY10/KYY09/KYY08/KYY06

**SHARP**

SHF34/SHF33/SHF32/SHF31

**SoftBank****KYOCERA**

501KC

**SHARP**

601SH/505SH/501SH

**ZTE**

302ZT

**WILLCOM****KYOCERA**

WX11K/WX12K

**SII**

WX04S

**Y!mobile****KYOCERA**

402KC/401KC

**iPhone用**

※Dock端子

※該当品番 : MB-89 / MB-87 / MB-68 / MB-96

iPhone 4S/3GS/3G

**従来型携帯電話****docomo Foma**

※該当品番 : MB-31 / MB-33 / MB-78

**NEC**N-01G/N-01F/N-01E/N-02D/N-03D/N-05C/N-03C/N-02C/N-01C/N-08B  
N-07B/N-06B/N-05B/N-04B/N-03B/N-02B/N-01B/N-09A/N-08A/N-07A/N-06A  
N-05A/N-04A/N-02A/N-01A/N-03A/N706iII/N706ie/N706i/N906i/N906i μ  
N705i μ/N705i/N905i μ/N905i/N704i μ/N904i/N703i μ/N703iD  
N903i/N902iX/N702iS/N902iS/SIMPURE N1(N601i)/N702iD/N902i  
N701i/N901iS/N901iC/SIMPURE N(N600i)**Panasonic**P-01H/P-01G/P-01F/P-01E/P-03D/P-04C/P-03C/P-02C/P-01C  
P-07B/P-06B/P-05B/P-04B/P-03B/P-02B/P-01B/P-10A/P-09A/P-08A/P-07A  
P-06A/P-04A/P-02A/P-03A/P-01A/P706ie/P706i μ/P906i/P705iCL/P905iTV  
P705i μ/P705i/P905i/P704i/P704i μ/P904i/P903iX/P903iTV/P703i μ/P703i  
P903i/P702iD/P902iS/P901iTV/P702i/P902i/P851i/P701iD/P901iS/P901i

**SHARP**

SH-07F/SH-03E/SH-05D/SH-03D/SH-10C/SH-11C/SH-06C/SH-05C/SH-04C/SH-02C  
SH-01C/SH-09B/SH-08B/SH-07B/SH-06B/SH-05B/SH-03B/SH-02B/SH-01B  
SH-08A/SH-07A/SH-06A/SH-05A/SH-04A/SH-02A/SH-03A/SH-01A/SH906iTV  
SH906i/SH905iTV/SH905i/SH904i/SH903iTV/SH903i/DOLCE SL (SH902iSL)  
SH902iS/SH902i/SH901iS/SH901iC/DOLCE (SH851i)/SH706iw/SH706ie/SH706i  
SH705iII/SH705i/SH704i/SH703i/SH702iS/SH702iD

**Motorola**

M1000

**富士通**

F-01G/F-08F/F-07F/F-01E/F-06D/F-04D/F-02D/F-10C/F-05C/F-04C/F-03C/F-02C  
F-01C/F-09B/F-10B/F-08B/F-07B/F-06B/F-04B/F-03B/F-02B/F-01B/らくらくホン(F-10A)  
F-08A/F-09A/らくらくホン(F-07A)/F-04A/F-03A/F-02A/F-01A/F1100/F906i/F905i  
F904i/F903iX/F903i/F902iS/F902i/F901iS/F901iC/らくらくホン(F884iES)  
らくらくホン(F884i)/らくらくホン(F883iES)/らくらくホン(F883i)/らくらくホン(F882iES)/F801i  
F706i/F705i/F704i/F703i/F702iD

**LG**

L-10C/L-01C/L-04B/L-03B/L-02B/L-01B/L-06A/L-04A  
L-03A/L-01A/L706ie/PRADA(L852i)/L705iX/L705i/L704i  
L602i/SIMPURE L1(L601i)/SIMPURE L(L600i)

**SonyEricsson**

SO906i/SO905iCS/SO905i/SO903iTV/SO903i/SO902iWP+/SO902i/SO706i/SO705i  
SO704i/SO703i/SO702i

**三菱**

D905i/D904i/D903iTV/D903i/D902iS/D902i/D901iS/D901i/らくらくホン(D880SS)  
Music Porter X (D851iWM)/D800iDS/D705i $\mu$ /D705i/D704i/D703i/D702iF/D702i  
Music Porter II(D701iWM)/D701i

**SANYO**

SA702i/SA800i

**au**

※該当品番 : MB-30 / MB-32 / MB-77

**SonyEricsson**

URBANO AFFARE (SOY05)/iida G11(SOX02)/URBANO MOND(SOY04)/S007/S006  
BRAVIA(S005)/BRAVIA(S004)/Cyber-shot (S003)/URBANO BARONE(SOY03)  
BRAVIA U1(SOY02)/S002/iida G9(SOX01)/Cyber-shot (S001)/Premier 3(SOY01)  
Xmini(W65S)/Cyber-shot (S001)/Premier 3(SOY01)/Xmini(W65S)/W64S/re(W63S)/W61S  
W62S/W54S/W53S/W52S/W51S/W44S/W43S/W42S/W41S/W32S/W31S

**CASIO**

G'z One TYPE-X (CAY01)/CA007/CA006/CA005/CA004/CA003/G'zone (CA002)  
CA001/W63CA/W62CA/W61CA/W53CA/W52CA/W51CA  
W43CA/G'zone(W42CA)/W41CA/W31CA/G'zone(A5513CA)/A5512CA

**SHARP**

SH011/SH010/SH009/SH008/SOLAR(SH007)/SH006/SH005  
SH004/SH003/SH002/Sportio water beat(SHY01)/SH001  
W64SH/W63SH/W62SH/W61SH/W52SH/W51SH/W41SH

**パンテック**

PT001/W62PT/A1407PT/A1406PT/A1405PT

**SANYO**

SA002/SA001/W64SA/W63SA/W61SA/W54SA/W62SA/INFOBAR 2(W55SA)/A5527SA  
W53SA/W52SA/A5525SA/Sweets cute (A5524A)/W51SA/W43SA/W42SA/A5522SA  
W33SAII/W32SA/W41SA/Sweets pure (A5519SA)/A5518SA/W33SA/A5514SA  
Sweets (A5510SA)/W31SA/W31SA II /A5507SA/A5508SA/A5505SA/A5503SA

**東芝**

E09F/iida X-RAY(TSX06)/iida LIGHT POOL(TSX05)/T005/T006/T007/T008  
T004/T003/iida PLY(TSX01)/biblio(TSY01)/T002/T001/W65T/W64T/W63T/W62T  
W61T/W56T/W55T/A5529T/W54T/W53T/W52T/W51T/A5523T/DRAPE (W46T)  
W47T/W45T/W44T/W43T/neon(W42T)/W41T/W32T/A5517T/A5516T/W31T  
A5511T/A5509T/A5506T/A5501T

**京セラ**

K011/K012/K010/K009/K008/K007/K006カメラ無し  
K006/K005/iida lotta(KYX04)/iida PRISMOID(KYX03)/K004/K003/iida misora (KYX02)  
K002/NS01/K001/W65K/W63K/W64K/W62K/W61K/W53K/MEDIA SKIN(W52K)  
W51K/W44K/W43K/W42K/W41K/W32K/W31KII/W31K/A101K/A5528K/A5526K  
A5521K/A5515K

**日立**

beskey(HIY02)/Hi-Vision Cam(HIY01)/H001/W63H/W62H/W61H/W53H/W52H/W51H  
W43H/W42H/W41H/W32H/PENCK(W31H)

**Panasonic**

PT002/P001/W62P/W61P/W52P/W51P

**SoftBank**

※該当品番 : MB-31 / MB-33 / MB-78

**SHARP**

301SH/202SH/109SH/108SH/008SH/004SH/002SH/001SH/DM007SH/DM008SH  
945SH/944SH/943SH/942SH/941SH/940SH/936SH/935SH/934SH/933SH/932SH  
931SH/930SH/923SH/922SH/921SH/920SH/913SH/912SH/910SH/911SH/905SH  
904SH/903SH/831SH/PANTONE (830SH)/825SH/824SH/823SH/822SH/821SH  
820SH/816SH/843SH/842SH/841SH/841SHs/840SH/832SH/815SH  
PANTONE( 812SH)/811SH/810SH/804SH/705SH/703SHf/703SH

**東芝**

921T/920T/912T/911T/910T/904T/903T/832T/824T/823T/822T/821T/820T  
815T/814T/813T/812T/811T/810T/803T/705T

**Panasonic**

401PM/301P/103P/001P/002P/002P for Biz/942P/941P/940P/931P/930P/921P  
920P/842P/841P/840P/831P/830P/824P/823P/822P/820P/810P/705P

**NEC**

001N/940N/931N/930N/840N/841N/831N/830N/820N/821N/804N/741N/703N

**カシオ**

930CA/830CA

**サムスン**

001SC/941SC/840SC/931SC/740SC

**ZTE**

840Z