

Willcom Co.,LTD 電池交換式充電器シリーズ

- ★該当品番 : MD-02 ... スマートフォン(MicroUSB端子)
- ★該当品番 : MD-01 ... iPhone(Dock端子)
- ★該当品番 : MD-03 / MD-05 ... Foma/SoftBank用端子
- ★該当品番 : MD-04 / MD-06 ... au用端子

スマートフォン用

※MicroUSB端子

※該当品番 : MD-02

docomo Foma

TOSHIBA

T-02D/T-01C/T-01B/T-01A

SonyEricsson

SO-02E/SO-04D/SO-05D/SO-03D/SO-02D/SO-01D/SO-03C/
SO-01C/SO-02C/SO-01B

SONY

SO-01E

SHARP

SH-05E/SH-04E/SH-02E/SH-01E/SH-10D/SH-09D/SH-07D/SH-06D/
SH-02D/SH-01D/SH-12C

SAMSUNG

SC-03E/SC-02E/SC-06D/SC-05D/SC-04D/SC-03D/SC-02C/SC-02B/SC-01B

Research In Motion

BlackBerry 9900/BlackBerryBold 9780/BlackBerryBold9300(電源OFF状態のみ、充電ランプが点灯します。)
BlackBerryBold9700

LG

L-02E/L-01E/L-06D/L-05D/L-02D/L-01D/L-03C/L-04C/L-07C

NEC

N-04E/N-03E/N-02E(ONE PIECEモデルも含む)/N-07D/N-05D/N-04D/N-01D

Panasonic

P-02E/P-07D/P-06D/P-04D/P-05D/P-02D/P-01D/P-07C

FUJITSU

F-02E/F-03E/F-04E/F-11D/F-12D/F-10D/F-09D/F-08D/F-07D/F-05D/F-03D

HUAWEI

HW-01E

au

TOSHIBA

IS11T/IS12T/IS04/IS02

SHARP

SHL21/IS17SH/IS15SH/ISW16SH/C01/IS14SH/IS13SH/IS12SH/
A-02/A01/IS11SH/IS05/IS03/IS01

PANTECH
PTL21/IS11PT/IS06

HTC
HTL21/ISW13HT/ISW12HT/ISW11HT

SonyEricsson
IS11S

SONY
SOL21

CASIO
CAL21/IS11CA

MOTOROLA
IS12M/ISW11M

KYOCERA
KYL21/KYY04/ISW11K

FUJITSU
FJL21/ISW13F/IS12F/ISW11F

NEC
IS11N

LG
LGL21/IS11LG

SAMSUNG
SCL21/ISW11SC

SoftBank

TOSHIBA
X02T

SHARP
203SH/200SH/DM013SH/107SH/102SH II /106SH/105SH/104SH/
DM012SH/103SH/102SH/DM011SH/101SH/DM010SH
009SH/005SH/DM009SH/006SH/007SHJ/007SH/003SH

SAMSUNG
X01SC/830SC

HTC
001HT
X06HT•X06HT II

ZTE
009Z/003Z/008Z

Panasonic

102P／101P／008P

NEC
101N

KYOCERA
201K／101K

HUAWEI
007HW

DELL
101DL

FUJITSU
201F／101F

HUAWEI
201HW

MOTOROLA
201M

Disney Mobile On So
DM014SH

E-MOBILE

HTC
S31HT

HUAWEI
GL07S/GS03／GS02／S31HW／S42HW

SonyEricsson
S51SE

DELL
GS01

WILLCOM

KYOCERA
WX06K／WX04K

iPhone用

※Dock端子
※該当品番：MD-01

iPhone4S / 4 / 3GS / 3G

従来型携帯電話

docomo Foma

※ Foma/SoftBank用端子
※該当品番：MD-03 / MD-05
NEC

N-01E/N-02D/N-03D/N-05C/N-03C/N-02C/N-01C/N-08B
N-07B/N-06B/N-05B/N-04B/N-03B/N-02B/N-01B/N-09A/N-08A/N-07A/N-06A
N-05A/N-04A/N-02A/N-01A/N-03A/N706iII/N706ie/N706i/N906i/N906iμ
N705iμ /N705i/N905iμ /N905i/N704iμ /N904i/N703iμ /N703iD
N903i/N902iX/N702iS/N902iS/SIMPURE N1(N601i)/N702iD/N902i
N701i/N901iS/N901iC/SIMPURE N(N600i)

Panasonic

P-01E/P-03D/P-04C/P-03C/P-02C/P-01C
P-07B/P-06B/P-05B/P-04B/P-03B/P-02B/P-01B/P-10A/P-09A/P-08A/P-07A/P-06A
P-04A/P-02A/P-03A/P-01A/P706ie/P706iμ /P906i/P705iCL/P905iTV/P705iμ /P705i
P905i/P704i/P704iμ /P904i/P903iX/P903iTV/P703iμ /P703i/P903i/P702iD
P902iS/P901iTV/P702i/P902i/P851i/P701iD/P901iS/P901i

SHARP

SH-03E/SH-05D/SH-03D/SH-10C/SH-11C/SH-06C/SH-05C/SH-04C/SH-02C/SH-01C
SH-09B/SH-08B/SH-07B/SH-06B/SH-05B/SH-03B/SH-02B/SH-01B/SH-08A/SH-07A
SH-06A/SH-05A/SH-04A/SH-02A/SH-03A/SH-01A/SH906iTV/SH906i/SH905iTV/SH905i
SH904i/SH903iTV/SH903i/DOLCE SL (SH902iSL)/SH902iS/SH902i/SH901iS/SH901iC
DOLCE (SH851i)/SH706iw/SH706ie/SH706i/SH705iII/SH705i/i
SH704i/SH703i/SH702iS/SH702iD

Motorola M1000

富士通

F-01E/F-06D/F-04D/F-02D/F-10C/F-05C/F-04C/F-03C/F-02C/F-01C/F-09B/F-10B
F-08B/F-07B/F-06B/F-04B/F-03B/F-02B/F-01B/らくらくホン(F-10A)/F-08A/F-09A
らくらくホン(F-07A)/F-04A/F-03A/F-02A/F-01A/F1100/F906i/F905i/F904i/F903iX/F903i
F902iS/F902i/F901iS/F901iC/らくらくホン(F884iES)/らくらくホン(F884i)/らくらくホン(F883iES)
らくらくホン(F883i)/らくらくホン(F882iES)/F801i/F706i/F705i/F704i
F703i/F702iD

LG

L-10C/L-01C/L-04B/L-03B/L-02B/L-01B/L-06A/L-04A/i
L-03A/L-01A/L706ie/PRADA(L852i)
L-04B/L-03B/L-02B/L-01B/L-06A/L-04A/L-03A/L-01A/L706ie/PRADA(L852i)
L705iX/L705i/L704i/L602i/SIMPURE L1(L601i)/SIMPURE L(L600i)

SonyEricsson

SO906i/SO905iCS/SO905i/SO903iTV/SO903i/SO902iWP+/SO902i/SO706i/SO705i/SO704i
SO703i/SO702i

三菱

D905i/D904i/D903iTV/D903i/D902iS/D902i/D901iS/D901i/らくらくホン(D880SS)
Music Porter X (D851iWM)/D800iDS/D705iμ /D705i/D704i/D703i/D702iF/D702i
Music Porter II(D701iWM)/D701i

SANYO

SA702i/SA800i

au

※ au用端子

※該当品番 : MD-04 / MD-06

SonyEricsson

URBANO AFFARE (SOY05)/iida G11(SOX02)/URBANO MOND(SOY04)/S007/S006
BRAVIA(S005)/BRAVIA(S004)/Cyber-shot (S003)/URBANO BARONE(SOY03)
BRAVIA U1(SOY02)/S002/iida G9(SOX01)/Cyber-shot (S001)/Premier 3(SOY01)

Xmini(W65S)／Cyber-shot (S001)／Premier 3(SOY01)／Xmini(W65S)／W64S／re(W63S)／W61S
W62S／W54S／W53S／W52S／W51S／W44S／W43S／W42S／W41S／W32S／W31S

CASIO

G'z One TYPE-X (CAY01)／CA007／CA006／
CA005／CA004／CA003／G'zone (CA002)／CA001／W63CA／W62CA／W61CA／W53CA／W52CA／W51
W43CA／G'zone(W42CA)／W41CA／W31CA／G'zone(A5513CA)／A5512CA

SHARP

SH011／SH010／SH009／
SH008／SOLAR(SH007)／SH006／SH005／SH004／SH003／SH002／Sportio water beat(SHY01)／SH00
W64SH／W63SH／W62SH／W61SH／W52SH／W51SH／W41SH

パンテック

PT001／W62PT／A1407PT／A1406PT／A1405PT

SANYO

SA002／SA001／W64SA／W63SA／W61SA／W54SA／W62SA／INFOBAR 2(W55SA)／A5527SA／W53SA
W52SA／A5525SA／Sweets cute (A5524A)／W51SA／W43SA／W42SA／A5522SA／W33SAII／W32SA
W41SA／Sweets pure (A5519SA)／A5518SA／W33SA／A5514SA／Sweets (A5510SA)／W31SA
W31SA II／A5507SA／A5508SA／A5505SA／A5503SA

東芝

E09F／iida X-RAY(TSX06)／iida LIGHT POOL(TSX05)／T005／T006／T007／T008
T004／T003／iida PLY(TSX01)／biblio(TSY01)／T002／T001／W65T／W64T／W63T／W62T／W61T
W56T／W55T／A5529T／W54T／W53T／W52T／W51T／A5523T／DRAPE (W46T)／W47T
W45T／W44T／W43T／neon(W42T)／W41T／W32T／A5517T／A5516T／W31T／A5511T
A5509T／A5506T／A5501T

京セラ

K011／K012／K010／K009／K008／K007／K006カメラ無し
K006／K005／iida lotta(KYX04)／iida PRISMOID(KYX03)／K004／K003／iida misora (KYX02)／K002／NSI
K001／W65K／W63K／W64K／W62K／W61K／W53K／MEDIA SKIN(W52K)／W51K／W44K／W43K／W42K
W41K／W32K／W31KII／W31K／A101K／A5528K／A5526K／A5521K／A5515K

日立

beskey(HIY02)／Hi-Vision Cam(HIY01)／H001／W63H／W62H／W61H／W53H／W52H／W51H／W43H／W
W41H／W32H／PENCK(W31H)

Panasonic

PT002／P001／W62P／W61P／W52P／W51P

SoftBank

※該当品番：MB-31／MB-33／MB-78

SHARP

202SH／109SH／108SH／008SH／004SH／002SH／001SH／DM007SH／DM008SH
945SH／944SH／943SH／942SH／941SH／940SH／936SH／935SH／934SH／933SH／932SH／931SH
930SH／923SH／922SH／921SH／920SH／913SH／912SH／910SH／911SH／905SH／904SH
903SH／831SH／PANTONE (830SH)／825SH／824SH／823SH／822SH／821SH／820SH／816SH
843SH／842SH／841SH／841SHs／840SH／832SH／815SH／PANTONE(812SH)
811SH／810SH／804SH／705SH／703SHf／703SH

東芝

921T／920T／912T／911T／910T／904T／903T／832T／824T／823T／822T／821T／820T
815T／814T／813T／812T／811T／810T／803T／705T

Panasonic

103P／001P／002P／002P for Biz／942P／941P／940P／931P／930P／921P／920P／842P／841P／84
831P／830P／824P／823P／822P／820P／810P／705P

NEC

001N/940N/931N/930N/840N/841N/831N/830N/820N/821N/804N/741N/703N

カシオ

930CA/830CA

サムスン

001SC/941SC/840SC/931SC/740SC

ZTE

840Z

CA

1

01

142H

0P