

# Willcom Co.,LTD イヤホンマイクシリーズ

- ★該当品番：MA-312 / MA-272 ... 3.5φ端子
- ★該当品番：MA-313 / MA-273 ... MicroUSB外部接続端子
- ★該当品番：MA-311 / MA-271 ... Foma/SoftBank外部接続端子
- ★該当品番：MA-316 / MA-275 ... au外部接続端子
- ★該当品番：MA-315 / MA-260 / MA-256 / MA-254 ... 平型端子

## スマートフォン (3.5φ端子用)

※3.5φ端子

※該当品番：MA-312 / MA-272

**docomo**

SHARP

SH-02J/SH-04H/SH-02H/SH-01H/SH-04G/SH-03G/SH-02G/SH-01G/SH-05F/SH-04F/SH-03F  
SH-02F/SH-01F/SH-07E/SH-06E/SH-02E/SH-01E/SH-09D/SH-07D/SH-01D/SH-13C/SH-12C  
SH-03C

Panasonic

P-03E/P-07D/P-06D/P-05D/P-04D/P-01D

富士通

F-01J/F-03H/F-02H/F-01H/F-04G/F-02G/F-06F/F-05F/F-04F/F-03F/F-01F/F-09E/F-08E  
F-07E/F-06E/F-04E/F-12D/F-11D/F-10D/F-09D/F-08D/F-07D/F-05D/F-03D/F-12C

NEC

N-05E/N-03E(D350は×)/N-02E/N-08D/N-06D

SonyEricsson

SO-04E/SO-02E/SO-05D/SO-04D/SO-03D/SO-02D

SONY

SO-02J/SO-01J/SO-04H/SO-03H/SO-02H/SO-01H/SO-04G/SO-03G/SO-02G/SO-01G  
SO-04F/SO-03F/SO-02F/SO-01F/SO-01E

東芝

T-02D/T-01D/T-01C

LG

Nexus 5X/L-01F/L-01E/L-06D/L-05D/L-02D/L-01D/L-07C/L-04C

サムスン

SC-02H/SC-01H/SC-04G/SC-05G/SC-01G/SC-02G/SC-04F/SC-02F/SC-01F/SC-04E  
SC-03E/SC-02E/SC-06D/SC-05D/SC-04D/SC-03D/SC-02D/SC-02C/SC-01C/SC-02B

RIM

BlackBerryBold 9900/BlackBerryBold 9780/BlackBerryBold 9300/BlackBerryBold 9700

HUAWEI

Nexus 6P/HW-03E

Disney Mobile

LG

DM-02H/DM-01G

SHARP

DM-01H

ZTE

MO-01J

Apple

iPhone7Plus/iPhone7/iPhone SE/iPhone6s Plus/iPhone6s/iPhone6Plus/iPhone6/iPhone5s/iPhone5c

**au**

SHARP

SHV37/SHV36/SHV35/SHV34/SHV33/SHV32/SHV31/SHL25/SHT22/SHL24/SHL23/SHL22  
SHL21/IS17SH/ISW16SH/IS13SH/IS12SH/IS05/IS03

富士通

FJL22/FJL21/ISW13F/IS12F/ISW11F

東芝

IS12T/IS11T/IS04

SonyEricsson

IS12S

SONY

SOV34/SOV33/SOV32/SOV31/SOL26/SOL25/SOL24/SOL23/SOL22/SOL21

CASIO

CAL21/IS11CA

京セラ

V03(KYV38)/KYV37/KYV36/G02(KYV35)/V02(KYV34)/A03/KYV32/KYL23/V01(KYV31)/G01(KYY24)  
L03(KYY23)/L02(KYY22)/KYL22/L01(KYY21)/KYL21

HTC

HTV32/HTV31/HTL23/HTL22/HTL21/ISW13HT/ISW12HT/ISW11HT

モトローラ

IS12M/ISW11M

Apple

iPhone7 Plus/iPhone7/iPhone SE/iPhone6s Plus/iPhone6s/iPhone6Plus/iPhone6/iPhone5s/iPhone5c  
iPhone5/iPhone4S

サムスン

SCV33/SCV32/SCV31/SCT21/SCL24/SCL23/SCL22/SCL21/ISW11SC

LG

LGV34/LGV33/LGV32/LGV31/LGL24/LGL23/LGL22/LGL21/IS11LG

PENTECH

PTL21/IS06

FirefoxOS(LG)

LGL25

**SoftBank**

SHARP

509SH/506SH/503SH/502SH/403SH/404SH/402SH/401SH/305SH/304SH/303SH/302SH/206SH  
205SH/204SH/200SH/107SH/106SH/104SH/102SH II/102SH/009SH/006SH/005SH/003SH

Panasonic

102P

富士通

301F/202F/101F

京セラ

503KC/404KC/202K/101K

HTC

001HT/X06HT(II)

Motolola

201M

DELL

101DL/001DL

HUAWEI

201HW/007HW

Apple

iPhone7 Plus/iPhone7/iPhone SE/iPhone6s Plus/iPhone6s/iPhone6Plus/iPhone6/iPhone5s/iPhone5c  
iPhone5/iPhone4S/iPhone4/iPhone3GS/iPhone3G

Disney Mobile

SHARP

DM016SH/DM014SH/DM010SH/DM009SH

京セラ

DM015K

SONY

601SO/502SO/501SO/402SO/401SO

ZTE

402ZT

サムスン

404SC

### EMOBILE

HTC

S31HT

DELL

GS01

HUAWEI

GS03/GS02/S31HW

富士通

EM01F

### WILLCOM

HUAWEI

201HW

SHARP

WX05SH/WX04SH

### Y!mobile

HUAWEI

503HW/302HW

京セラ

503KC/404KC/302KC

MOTOROLA

Nexus6

LG

402LG

SHARP

507SH

### その他

LG

NEXUS5

### iPhone用 (3.5φ端子用)

※3.5φ端子

※該当品番 : MA-312 / MA-272

iPhone7 Plus/iPhone7/iPhone SE/iPhone6s Plus/iPhone6s/iPhone6Plus/iPhone6/iPhone5s/iPhone5c  
iPhone5/iPhone4S/iPhone4/iPhone3GS/iPhone3G

## スマートフォン（MicroUSB外部接続端子用）

※MicroUSB外部接続端子

※該当品番：MA-313 / MA-273

**docomo**

SHARP  
SH-10D / SH-06D / SH-02D

Panasonic  
P-02D / P-07C

NEC  
N-07D / N-05D / N-04D / N-01D / N-06C / N-04C

富士通  
F-07C

**au**

SHARP  
IS15SH / C01 / IS14SH / IS11SH

富士通  
F001

NEC  
IS11N

京セラ  
KYY04 / ISW11K

PANTECH  
PT003 / IS11PT

**SoftBank**

SHARP  
101SH / 007SH

Panasonic  
101P / 003P

NEC  
101N

Disney Mobile  
SHARP  
DM011SH

**Willcom**

京セラ  
WX10K / WX07K / WX04K

## 従来型携帯電話（MicroUSB外部接続端子用）

※MicroUSB外部接続端子

※該当品番：MA-313 / MA-273

**docomo**

FUJITSU  
F-02J / F-05G

Panasonic  
P-01J

SHARP  
SH-01J / SH-06G

**au**

京セラ  
KYF32 / KYF31 / KYY10 / KYY09

SHARP  
SHF33 / SHF32 / SHF31

**SoftBank**

京セラ  
501KC

SHARP  
601SH/505SH/501SH

**WILLCOM**

京セラ  
WX11K/WX12K

**Y!mobile**

京セラ  
402KC/401KC

**Foma/SoftBank外部接続端子用**

※Foma/SoftBank外部接続端子  
※該当品番 : MA-311 / MA-271 / MA-270

**docomo Foma**

NEC  
N-01G/N-01F/N-01E/N-02D/N-03D/N-05C/N-03C/N-02C/N-01C/N-08B  
N-07B/N-06B/N-05B/N-04B/N-02B/N-01B/N-09A/N-08A/N-07A  
N-06A/N-05A/N-04A/N-03A/N-02A/N-01A  
N906i/N906i $\mu$ /N905i $\mu$ /N905i/N904i/N903i/N902iX/N902iS  
N706iII/N706ie/N706i/N705i $\mu$ /N705i

Panasonic  
P-01H/P-01G/P-01F/P-01E/P-03D/P-04C/P-05C/P-06C/P-03C/P-02C/P-01C/P-07B  
P-06B/P-05B/P-04B/P-03B/P-02B/P-01B/P-10A/P-09A/P-08A/P-07A/P-06A  
P-04A/P-03A/P-02A/P706ie/P706i $\mu$ /PROSOLID $\mu$ (P705iCL)/P705i $\mu$ /P705i

SHARP  
SH-07F/SH-03E/SH-05D/SH-03D/SH-10C/SH-11C/SH-06C/SH-05C/SH-04C/SH-02C  
SH-01C/SH-09B/SH-08B/SH-07B/SH-06B/SH-05B/SH-03B/SH-01B/SH-08A/SH-07A  
SH-06A/SH-05A/SH-04A/SH-03A/SH-02A/SH-01A/SH906iTV/SH906i/SH905iTV/SH905i

富士通  
F-01G/F-08F/F-07F/F-01E/F-06D/F-04D/F-02D/F-10C/F-09C/F-11C/F-08C/F-05C  
F-04C/F-03C/F-02C/F-01C/F-10B/らくらくホン(F-09B)/F-08B  
F-07B/F-06B/F-04B/F-03B/F-02B/F-01B/らくらくホン(F-10A)  
F-09A/F-08A/らくらくホン(F-07A)/F-04A/F-03A/F-02A/F-01A/F-1100/F906i/F905i/F904i

LG  
L-10C/L-01C/L-04B/L-03B/L-02B  
L-06A/L-04A/L-01A

**SoftBank**

SHARP  
301SH/202SH/109SH/108SH/DM007SH/DM008SH/008SH/004SH/002SH/001SH  
945SH/944SH/943SH/942SH/941SH/940SH/843SH/842SH/841SH/841SHs/840SH

Panasonic  
401PM/301P/103P/002P for Biz/002P/001P/942P/941P/940P  
931P/842P/841P/840P/831P/830P

サムスン  
001SC/941SC/840SC

NEC  
001N/940N/931N/930N/841N/840N/831N/830N/821N/820N/741N

カシオ  
930CA/830CA

**WILLCOM**

SHARP  
WX02SH/WX01SH

## au外部接続端子用

※au外部接続端子

※該当品番 : MA-316 / MA-275

SonyEricsson

SOY05 / SOY04 / SOX02 / S007 / Cyber-shot(S006) / BRAVIA(S005)

BRAVIA(S004) / Cyber-shot(S003) / URBANO BARONE (SOY03) / BRAVIA U1(SOY02)

CASIO

CA007 / CA006 / G'z One TYPE-X (CAY01)

CA005 / CA003

SHARP

SH011 / SH010 / SH009 / SH008 / SH007 / SH006

SH005 / SH004 / SH003 / SH002

Sportio water beat(SHY01) / SH001 / W64SH

パンテック

PT002 / W61PT

SANYO

SA002 / SA001

東芝

iida X-RAY(TSX06) / T005 / T006 / T008 / T007 / iida LIGHT POOL(TSX05)

T004 / T003 / iida PLY(TSX04) / bibilio (TSY01) / T002 / T001

京セラ

K011 / K012 / K006カメラ無し / K008 / K007 / K009 / E09F

K006 / K005 / K004 / iida LOTTA / iida PRISMOID (KYX03) / KYX04 / K003 / K002

日立

beskey(HIY02) / Mobile Hi-Vision CAM(HIY01) / H001

## 平型端子用

※平型端子

※該当品番 : MA-315 / MA-260 / MA-256 / MA-254

### docomo Foma

NEC

N704i  $\mu$  / N703i  $\mu$  / N703iD / N702iD

SIMPURE N1 (N601i) / SIMPURE N (N600i)

Panasonic

P-01A / P906i / P905iTV / P905i / P904i / P903iX / P903iTV / P902iS / P902i

PROSOLID II (P851i) / P704i  $\mu$  / P703i  $\mu$  / P703i / P702iD / P702i / P701iD

SHARP

SH-10B / SH904i / SH903iTV / SH903i / DOLCE SL(SH902iSL)

SH902iS / SH706ie / SH705iII

SH705i / SH704i / SH703i / SH702iS / SH702iD

富士通

F903iX / F903i / F902iS / F884i / らくらくホン(F884iES) / らくらくホン(F883iES)

らくらくホン(F883i) / らくらくホン(F882iES)

F704i / F703i / F702i D

LG

L-03A / PRADA / L706i e / L705iX / L705i / L704i / L602i(SIMPURE L2) / L601i(SIMPURE L1)

SonyEricsson

SO906i / SO905iCS / SO905i / SO903iTV / SO903i / SO902i WP+

SO706i / SO705i / SO704i / SO703i / SO702i

三菱

D905i / D904i / D903iTV / D903i / D902iS

MUSIC PORTER II (D701iWM) / MUSIC PORTER X(D851iWM)

D705i / D705i  $\mu$  / D704i / D703i / D702iF / D702i

SANYO

SA702i / SA800i

CASIO  
CA-01C

**au**

SonyEricsson  
S002/iida G9(SOX01)/Cyber-shot (S001)  
Premier 3(SOY01)/Xmini(W65S)/W64S  
re(W63S)/Cyber-Shot W61S/W62S/W54S  
W53S/W52S/W51S/W44S/W43S/W42S/W41S

CASIO  
CA004/G'zone (CA002)/W63CA/G'zone(W62CA)/W61CA/EXILIM (W53CA)  
W52CA/W51CA/W43CA/G'zone (W42CA)/W41CA

SHARP  
URBANO (W63SH)/W62SH/W61SH/W52SH/W51SH/W41SH

パンテック  
W62PT/A1407PT/A1406PT

SANYO  
W64SA/W63SA/W62SA/W61SA/INFOBAR 2 (W55SA)/W54SA/W53SA/W52SA  
W51SA/W43SA/W42SA/W41SA/A5527SA/A5525SA/Sweet cute(A5524SA)/A5522SA

東芝  
W65T/W64T/Sportio (W63T)/W62T/W61T/W56T  
W55T/W54T/W53T/W52T/W51T/W47T/DRAPE (W46T)  
W45T/W44T/W43T/neon(W42T)/W41T/A5529T/A5523T

京セラ  
iida misora (KYX02)/NS01/K001/W65K/W64K/W63K/W62K/W61K/W53K/MEDIA SKIN(W52K)  
W51K/W44K/W43K/W42K/W41K/A5528K/A5526K/A5521K

日立  
W63H/W62H/W61H/W53H/W52H/W51H  
W43H/W42H/W41H

Panasonic  
P001/W62P/W61P/W52P/W51P

**SoftBank**

SHARP  
936SH/935SH/934SH/933SH/932SH/931SH/930SH/923SH/922SH  
921SH/920SH/913SH/912SH/832SH/831SH/PANTONE (830SH)/825SH  
824SH/823SH/822SH/821SH/820SH/816SH/815SH/PANTONE ( 812SH)/811SH

東芝  
911T/820T/813T/812T

Panasonic  
930P/921P/920P/822P/820P/810P

サムスン  
940SC/931SC/930SC/740SC

**WILLCOM**

京セラ  
WX05K/WX01K/WX320K/WX310K

JRC(日本無線)  
WX321J/WX310J

SANYO  
WX310SA

SHARP  
WILLCOM 03 (WS020SH)/W-ZERO3[es] (WS011SH)  
W-ZERO3[es] (WS007SH)/W-ZERO3( WS004SH)  
W-ZERO3 (WS003SH)