

Willcom Co.,LTD microUSBケーブルシリーズ

★ microUSB外部接続端子

※一部のスマートフォンや携帯電話は、防水機能などにより、コネクタが奥までささらない場合がございますので、ご注意ください。

スマートフォン用

※microUSB端子

docomo Foma

TOSHIBA

T-02D/T-01C/T-01B/T-01A

SonyEricsson

SO-04E/SO-02E/SO-04D/SO-05D/SO-03D/SO-02D/SO-01D/SO-03C
SO-01C/SO-02C/SO-01B

SONY

SO-04H/SO-03H/SO-02H/SO-01H/SO-04G/SO-03G/SO-02G/SO-01G/SO-04F/SO-03F
SO-02F/SO-01F/SO-01E

SHARP

SH-02J/SH-04H/SH-02H/SH-01H/SH-04G/SH-03G/SH-02G/SH-01G/SH-05F/SH-04F
SH-03F/SH-02F/SH-01F/SH-07E/SH-06E/SH-05E/SH-04E/SH-02E/SH-01E/SH-10D
SH-09D/SH-07D/SH-06D/SH-02D/SH-01D/SH-12C

SAMSUNG

SC-02H/SC-01H/SC-04G/SC-05G/SC-01G/SC-02G/SC-04F/SC-02F/SC-01F/SC-04E
SC-03E/SC-02E/SC-06D/SC-05D/SC-04D/SC-03D/SC-02C/SC-02B/SC-01B

Research In Motion

BlackBerry 9900/BlackBerryBold 9780
BlackBerry Curve 9300/BlackBerryBold9700

LG

L-01F/L-05E/L-04E/L-02E/L-01E/L-06D/L-05D/L-02D/L-01D/L-03C/L-04C/L-07C

NEC

N-06E/N-05E/N-04E/N-03E/N-02E(ONE PIECEモデルも含む)/N-07D
N-05D/N-04D/N-01D

Panasonic

P-03E/P-02E/P-07D/P-06D/P-04D/P-05D/P-02D/P-01D/P-07C

FUJITSU

F-04J/F-01J/F-03H/F-02H/F-01H/F-04G/F-02G/F-06F/F-05F/F-04F/F-03F/F-01F
F-09E/F-08E/F-07E/F-06E/F-02E/F-03E/F-04E/F-12C/F-11D/F-12D/F-10D/F-09D
F-08D/F-07D/F-05D/F-03D

HUAWEI

HW-03E/HW-01E

Disney Mobile On Docomo

DM-01J/DM-02H/DM-01H/DM-01G

ZTE

MO-01J

au

TOSHIBA

IS11T/IS12T/IS04/IS02

SHARP

SHV38/SHV37/SHV36/SHV35/SHV34/SHV33/SHV32/SHV31/SHL25/SHT22/SHL24/SHL23
SHL22/SHL21/IS17SH/IS15SH/ISW16SH/C01/IS14SHIS13SH/IS12SH/A01/IS11SH/IS05/IS03
IS01

PANTECH

PTL21/IS11PT/IS06

HTC

HTV31/HTL23/HTL22/HTL21/A02/ISW13HT/ISW12HT/ISW11HT

SonyEricsson

IS12S/IS11S

SONY

SOV33/SOV32/SOV31/SOL26/SOL25/SOL24/SOL23/SOL22/SOL21

CASIO

CAL21/IS11CA

MOTOROLA

IS12M/ISW11M

KYOCERA

KYV40/KYV39/V03(KYV38)/KYV37/KYV36/G02(KYV35)/V02(KYV34)/A03/KYV32/KYL23/V01(KYV
G01(KYY24)/L03(KYY23)/L02(KYY22)/KYL22/L01(KYY21)/KYL21/KYY04/ISW11K

FUJITSU

FJL22/FJL21/ISW13F/IS12F/ISW11F

NEC

IS11N

LG

LGV33/LGV32/LGV31/LGL24/LGL23/LGL22/LGL21/IS11LG

SAMSUNG

SCV33/SCV32/SCV31/SCT21/SCL24/SCL23/SCL22/SCL21/ISW11SC

FirefoxOS(LG)

LGL25

SoftBank

TOSHIBA

X02T

SHARP

603SH/509SH/506SH/503SH/502SH/403SH/404SH/402SH/401SH/305SH/304SH/303SH
302SH/206SH/205SH/204SH/203SH/200SH/107SH/102SH II/106SH/104SH/103SH/102SH
101SH/009SH/005SH/006SH/007SHJ/007SH/003SH

SAMSUNG

404SC/X01SC/830SC

HTC

001HT/X06HT•X06HT II

ZTE

402ZT/009Z/003Z/008Z

Panasonic

102P/101P

NEC

101N

KYOCERA

503KC/404KC/202K/201K/101K

HUAWEI

201HW/007HW

DELL

101DL

FUJITSU

301F/202F/201F/101F

MOTOROLA

201M

Disney Mobile On SoftBank

DM016SH/DM015K/DM014SH/DM009SH/DM010SH/DM011SH/DM012SH/DM013SH

SONY

502SO/501SO/402SO/401SO

E-MOBILE**HTC**

S31HT

HUAWEI

GL07S/GS03/GS02/S31HW/S42HW

SonyEricsson

S51SE

DELL

GS01

FUJITSU

EM01F

WILLCOM**KYOCERA**

WX10K/WX06K/WX04K

SHARP

WX05SH/WX04SH

HUAWEI

201HW

Y!mobile**HUAWEI**

503HW/302HW

KYOCERA

S2/503KC/404KC/302KC

MOTOROLA

Nexus6

LG

402LG

SHARP

S1/507SH

その他

LG
NEXUS5

従来型携帯電話 (microUSB端子)

※microUSB端子

docomo

FUJITSU
F-02J / F-05G

SHARP

SH-01J / SH-06G

Panasonic

P-01J

au

KYOCERA
KYF34 / KYF33 / KYF32 / KYF31 / KYY10 / KYY09 / KYY08 / KYY06

SHARP

SHF33 / SHF32 / SHF31

SoftBank

KYOCERA
501KC

SHARP

601SH / 505SH / 501SH

ZTE

302ZT

WILLCOM

KYOCERA
WX11K / WX12K

SII

WX04S

Y!mobile

KYOCERA
402KC / 401KC